


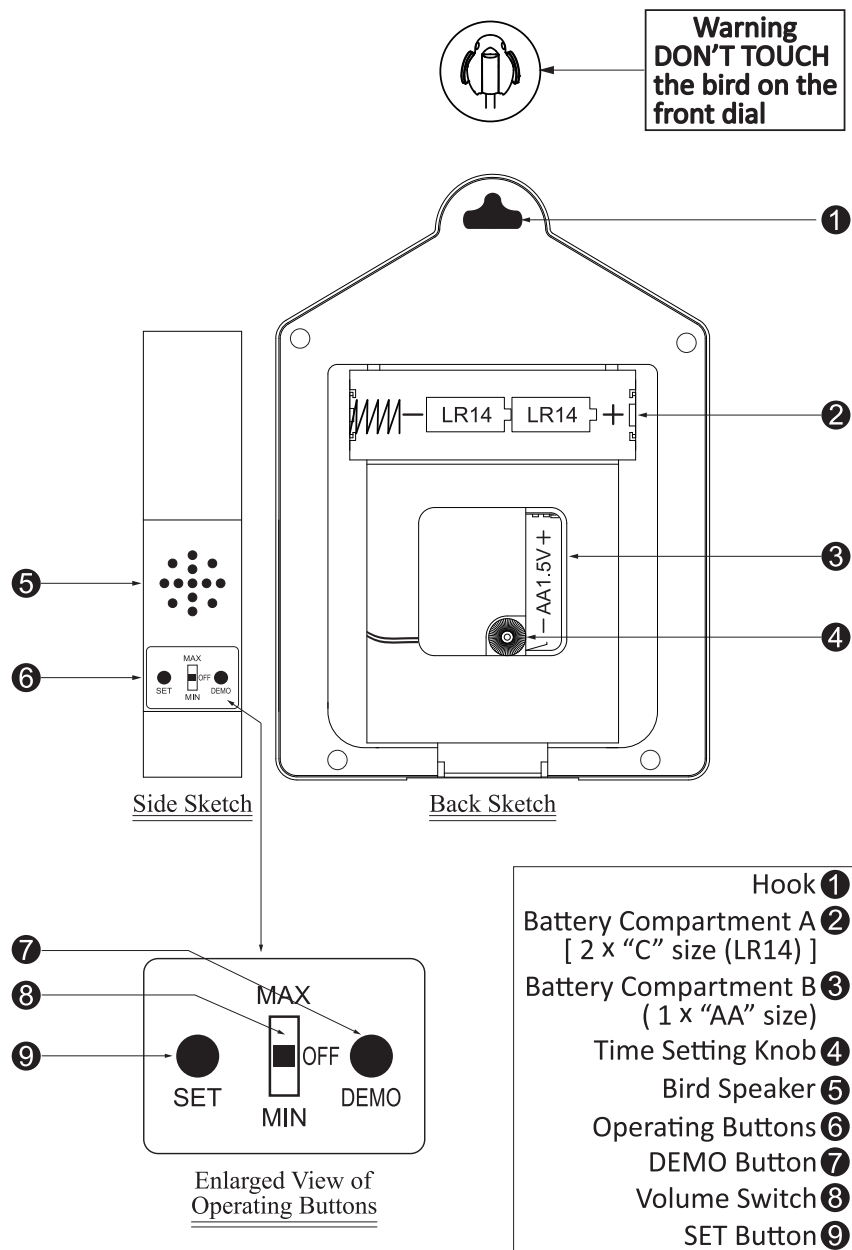

1. Open the back cover, insert 2 x "C" (LR14) size batteries into the **Battery Compartment A ②** and 1 x "AA" size battery into the **Battery Compartment B ③** as symbols indicate.
2. Turn the **Time Setting Knob ④**, make sure the clock hands move into the clockwise direction. At first, please set the clock to 6:00 o'clock. You will hear the bird singing six times. It means the CLOCK time (not local time) is at 6:00 o'clock a.m. Now, you can start to set the local time.

Because this clock is 12-hour format, it can not tell day or night in 24 hours. The next two steps are to help the clock to know day time or night time.

3. If the local time when setting is later than 6:00 a.m. but earlier than 6:00 p.m. (day time), just turn the clock hands to the corresponding number. For example, if the local time is at 9:35 a.m., turn the hands to 9:35.
4. If the local time when setting is later than 6:00 p.m. but earlier than 6:00 a.m. (night time), please turn the clock hands to the corresponding number but add one more circle turning. For example, if the local time is at 7:00 p.m., turn the hands to 7:00 and add one more hour and turn back again to 7:00.
5. Ignore the bird chiming or singing during the settings.
6. The programmed silent time of this clock is from 10:00 p.m. to 5:00 a.m. per day. The initial bird singing time starts at 6:00 a.m.
7. After setting(s), please close the back cover, hang it vertically on the wall through the **Hook ①**.
8. **Operating Buttons ⑥**:
9. **Volume Switch ⑧** is to control the volume of the **Bird Speaker ⑤**. It has MAX (high), OFF (mute) and MIN (low) three levels. Please move the switch to the position you need.

How to use **SET Button ⑨**: After the setting is finished, but the bird singing times are later than or less than the set time, press the SET button to add to the correct time(s). For example, the set time is 8:00, but the bird only sings 7 times, press the button only once, you will hear the bird singing 8 times. If the bird sings 9 times, press this button 11 times ($9 + 11 = 20:00 = 8:00$ p.m.), you will hear the bird singing 8 times.

DEMO Button ⑦ is a testing button. Press it to test the bird is singing or not.

If you make a mistake during the steps, the clock needs to be reset. Just take out all batteries. One minute later, please reset the clock from the very beginning and start again from step 2.